


# how to measure, level & hang with 1 keyhole


## 1. identify your hanger

Some wall decor and mirrors come with 1 keyhole. Some products come with keyholes cut into the wood and other products can have metal plates with keyholes. All will be a similar shape to what is illustrated here.

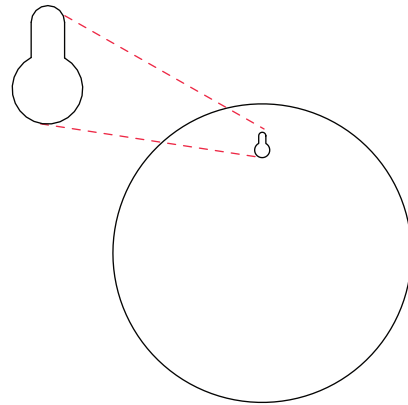


## 2. take your measurements

Measure the distance from the top of the wall decor piece or mirror to the center of the top of the keyhole. Also from the side of the piece to the center of the keyhole shaft. Record these measurements.

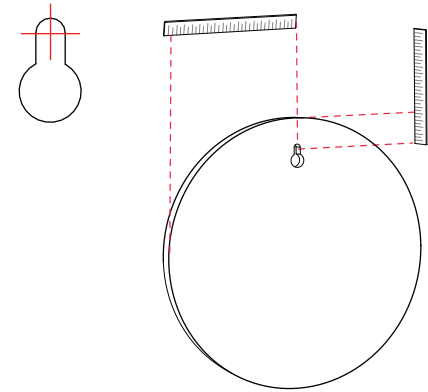


## 3. transfer measurements to your wall

Determine the position of your wall decor or mirror on the wall. (See tips for picture placements). Transfer measurements onto the wall. Mark the position for your pilot hole and install your mounting hardware. **Note:** see 'how to install drywall anchors and screws'.

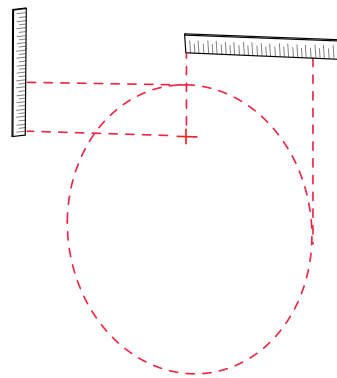

## 4. hang your item

Line up the large circle of the keyhole with your screw in the wall, then lower into place.

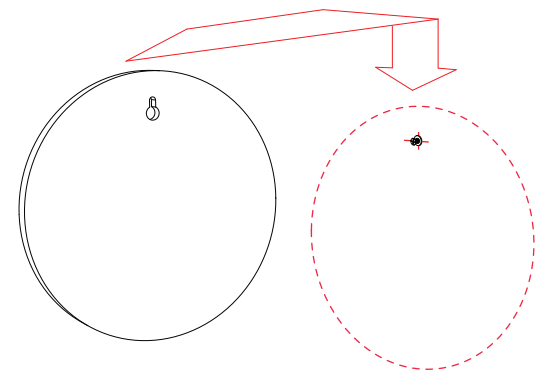

your done!